


# Introduction

## Getting Started

Diagram of GP

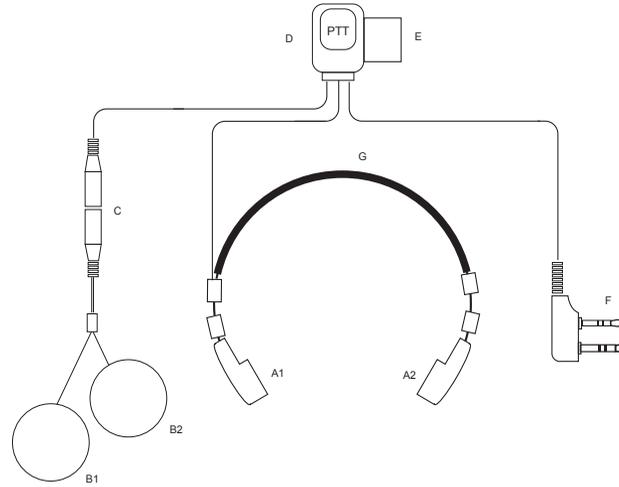

- A1, A2.  Transponders. Picks up the sound vibrations from your  throat.
- B1, B2  Padded speaker earphones.
- C  Male/Female jack connecting earphones with throat

- mic.
- D  Finger Press To Talk (PTT) button.
- E  Velcro strap for finger.
- F  Two way radio plug.
- G  Adjustable neckband

## Using your GP

The Noise Terminator GP is a headset that does not require any special installation. Firstly, place the ear pad earphones into your helmet, aligning it to ear level. Plug the twin padded speaker earphones into the throat mic. Next, plug the headset into your two way radio and place the neck band around your neck. Position the transponders flush on your neck. (Due to the variance in human anatomy, the position of the transponders may require adjustment for maximum performance.) Slide the wires of the PTT switch inside your sleeve, and attached the PTT switch to your finger or to your handlebars via the Velcro strip. Your GP is now operational. To start talking, simply press the PTT switch.

Congratulations on your purchase of the Noise Terminator GP. The GP is designed specifically with motorcyclists in mind, allowing riders to speak with each other or to their pit team via their FRS two-way radios. The GP gives riders more freedom and comfort. Riders are no longer hampered by clumsy helmet devices, which can be a nuisance, as they have to be mounted to their helmets.

Product registration is an important step toward enjoying your new Noise Terminator GP. Registering is required for warranty coverage. To register online, please visit  [www.iasus-concepts.com/registration.html](http://www.iasus-concepts.com/registration.html) Please retain your original dated sales document receipt for your records. For warranty service of your GP, you will need to provide a copy of your dated sales receipt to confirm warranty status.

Diagram of throat mic on neck.


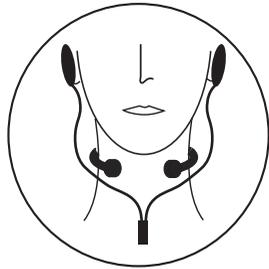


Diagram of finger PTT

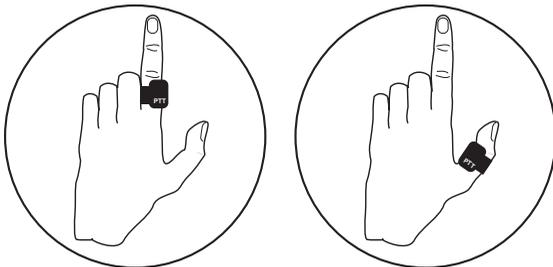

## Use and Care

For optimal voice quality when using the GP, we suggest placing the transponders about 0.5 - 1 inch on either side of your larynx/voice box. However, the optimal position on the neck to place the GP's transponder will vary between individual users. Therefore, each user is encouraged to find his or her optimal position.

For users with larger neck sizes, the GP's neckband is adjustable. To increase the diameter of the neckband, simply hold the area where the neckband meets the transponder and pull gently to slide the extendable neckband down. Reverse this procedure to decrease the diameter.

While the GP is water resistant, it is not waterproof. Do not immerse it in water.

## Caution

- It is extremely dangerous to ride a motorcycle off track  while talking. It may also be illegal in some areas. We  only recommend using the GP for track riding only.
- The transponders are highly sensitive. Do not press  against the inside face of the transponder.
- Do not operate your two way radio at high audio

- volumes when using the GP. Hearing experts advise  against the continuous high volume operation. If you  experience ringing in your ears, discontinue using the  GP.

## Troubleshooting

- | Problem <input type="checkbox"/>         | Solution  |
|--|---|
| Cannot transmit <input type="checkbox"/> | Check that the two way radio is turned on and <input type="checkbox"/>  |
| <input type="checkbox"/>                 | has power   |
| <input type="checkbox"/>                 | • Two way radio plug may not be fully inserted <input type="checkbox"/> |
| <input type="checkbox"/>                 | into the radio  |
| <input type="checkbox"/>                 | • PTT button may not be fully depressed                                 |
| <input type="checkbox"/>                 | • Transponders may not be flushed against your <input type="checkbox"/> |
| <input type="checkbox"/>                 | neck  |
| <input type="checkbox"/>                 | • Shared another channel may be in use.                                 |

- |   |  |
|---|--|
| Cannot Receive <input type="checkbox"/> | Check that the two way radio is turned on and <input type="checkbox"/>   |
| <input type="checkbox"/>                | has power  |
| <input type="checkbox"/>                | • Radios may not be on the same frequencies                              |
| <input type="checkbox"/>                | • The volume on the PTT or on the two way <input type="checkbox"/>       |
| <input type="checkbox"/>                | radio may be set too low   |
| <input type="checkbox"/>                | • Two way radio plug may not be fully inserted <input type="checkbox"/>  |
| <input type="checkbox"/>                | into the radio   |
| <input type="checkbox"/>                | • PTT button on your headset or radio may still <input type="checkbox"/> |
| <input type="checkbox"/>                | be inadvertently depressed   |

- You may be out of range or obstructed by other
- objects or other communicators. Change your
- location or frequencies.

- Weak   Transmission**
- Batteries on your radio may be weak
  - Transponders may not be flushed against your
  - neck.

- Weak   Reception**
- Batteries on your radio may be weak
  - Volume dial on the headset PTT or on your
  - radio may be set too low
  - Two way radio plug may not be loose.

- Plug will not fit**
- The particular model of the GP may not be
  - compatible with your radio. Please check with
  - your IASUS Concepts dealer or with the
  - IASUS Concepts website.

- VOX does   not work**
- This GO model was not designed to work with
  - VOX even if your radio has this function.

For more help on troubleshooting, please contact your IASUS Concepts dealer or with the IASUS Concepts website.

### One Year Limited Warranty

#### What this warranty covers

IASUS Concepts Limited warrants that the Noise Terminator GP sold by IASUS Concepts or its authorized agents are free from defects in materials and workmanship under normal use for one year. This warranty is only applicable to the original purchaser of the Noise Terminator GP, when accompanied by a dated sales document receipt and the name of the company from which it was purchased. This warranty is in lieu of and excludes all other warranties, expressed or implied, including any implied warranty of merchantability or fitness, and of any other obligation on the part of IASUS Concepts Limited.

#### What IASUS Concepts will do to correct warranty problems

At our discretion, we will repair or replace the product. We may use functionally equivalent reconditioned/refurbished/pre-owned or new products or parts.

#### To get warranty service

Please contact our customer service department via our website. Once you have done so, you will receive instructions on how to ship the products to IASUS Concepts or our designated resource. If instructed to ship the product, you must ship them with freight, duties, and insurance prepaid. Regardless of where

you are instructed to ship your product, you must include:

- A copy of your dated sales document receipt
- A written description of the problem
- Your name, address, and contact details
- Payment for any services or repairs not covered by the
- warranty. This should have been predetermined with
- your customer service representative.

- current date.
- Products that are not accompanied by a valid proof of
- purchase.

#### To Register for your warranty

Please visit [www.iasus-concepts.com/registration.html](http://www.iasus-concepts.com/registration.html) to register your product for warranty.

### RETAIN YOUR ORIGINAL PROOF OF PURCHASE

For products we ask you to ship to us, we will ship repaired or replacement products at our expense for the freight and insurance, but at your expense for any duties.

#### What this warranty does not cover

- Damage from improper operation, misuse, neglect such
- as dropping the product onto hard surfaces, contact with
- extreme humidity or heat, or acts of nature (lightning,
- floods, power surges etc)
- Products that may have been tested, adjusted, installed,
- maintained, repaired or altered in any way by persons
- not expressly approved by IASUS Concepts Limited.
- Any of these voids the warranty
- Coil cords that are stretched
- Products purchased more than 12 months from the
- 

#### Legal Information

There is no informal dispute settlement mechanism available. This warranty gives you specific legal rights, and you may also have other rights, which vary geographically. Some areas do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusions or limitations or consequential damages, so the above limitations or exclusions may not apply to you. IASUS Concepts shall not be liable for any special or consequential damages or for loss or expense directly or indirectly arising from use of the product or in inability to use the product in combination with other equipment or from any other cause. IASUS Concepts reserves the right to make changes in the design of the product and to make additions or improvements to it without incurring any obligation to modify any products previously sold.

[www.iasus-concepts.com/registration.html](http://www.iasus-concepts.com/registration.html)

Please visit the following link to register your product for warranty:

**To Register for your warranty**

