Introduction


Congratulations on your purchase of the Noise Terminator GP. The GP is designed specifically with motorcyclists in mind, allowing riders to speak with each other or to their pit team via their FRS two-way radios. The GP gives riders more freedom and comfort. Riders are no longer hampered by clumsy helmet devices, which can be a nuisance, as they have to be mounted to their helmets.

Product registration is an important step toward enjoying your new Noise Terminator GP. Registering is required for warranty coverage. To register online, please visit

www.iasus-concepts.com/registration.html

Please retain your original dated sales document receipt for your records. For warranty service of your GP, you will need to provide a copy of your dated sales receipt to confirm warranty status.

Getting Started

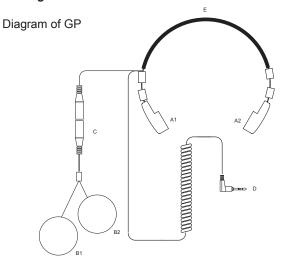

A1, A2.	☐Transponders. Picks up the sound vibrations from your ☐
	throat.
B1, B2	Padded speaker earphones.
$C \square$	Male/Female jack connecting earphones with throat □ □
П	mic.

D □ Two way radio plug.E □ Adjustable neckband

Using your GP

The Noise Terminator GP is a headset that does not require any special installation. Firstly, place the ear pad earphones into your helmet, aligning it to ear level. Plug the twin padded speaker earphones into the throat mic. Next, plug the headset into your two way radio and place the neck band around your neck. Position the transponders flush on your neck. (Due to the variance in human anatomy, the position of the transponders may require adjustment for maximum performance.) Your GP is now operational. Your two way radio will transmitting via its voice activated transmission (VOX) feature as soon as you start talking.

Use and Care

П

Weak □ □

Reception

For optimal voice quality when using the GP, we suggest placing the transponders about 0.5 - 1 inch on either side of your larynx/voice box. However, the optimal position on the neck to place the GP's transponder will vary between individual users. Therefore, each user is encouraged to find his or her optimal position.

into the radio

neck.

Diagram of throat mic on neck.



For users with larger neck sizes, the GP's neckband is adjustable. To increase the diameter of the neckband, simply hold the area where the neckband meets the transponder and pull gently to slide the extendable neckband down. Reverse this procedure to decrease the diameter.

While the GP is water resistant, it is not waterproof. Do not immerse it in water.

Caution

□ It is extremely dangerous to ride a motorcycle off track
 □ while talking. It may also be illegal in some areas. We
 □ only recommend using the GP for track riding only.

• The transponders are highly sensitive. Do not press □ □
against the inside face of the transponder.
 Do not operate your two way radio at high audio
volumes when using the GP. Hearing experts advise □□
against the continuous high volume operation. If you $\Box\Box$
experience ringing in your ears, discontinue using the \square
GP.

Troubleshooting

Problem Cannot transm	Solution it Check that the two way radio is turned on and □
	has power
	• Two way radio plug may not be fully inserted
	into the radio
	Two way radio may not be set on VOX mode
	 Transponders may not be flushed against your □
	neck
	Shared another channel may be in use.

Cannot	Receive	Check that the two way radio is turned on and □
		has power
		Radios may not be on the same frequencies

Radios may not be on the same frequencies
$ullet$ The volume on the PTT or on the two way \Box
radio may be set too low

		into the radio	
		 You may still be talking and your VOX 	
		transmission mode has not yet been □	
		deactivated	
		 PTT button on your headset or radio may s 	till 🗆
		be inadvertently depressed	
		 You may be out of range or obstructed by of 	other 🗆
		objects or other communicators. Change ye	our 🗆
		location or frequencies.	
Weak		Batteries on your radio may be weak	
Transmission		 Transponders may not be flushed against y 	our/

[●] Two way radio plug may not be fully inserted

□

Plug	will not fit	\square \circ The particular model of the GP may not be \square \square
		compatible with your radio. Please check with [
		your IASUS Concepts dealer or with the
		IASUS Concepts website.

Batteries on your radio may be weakVolume dial on your radio may be set too low

• Two way radio plug may not be loose.

To get warranty service Please contact our customer service department via our website. Once you have done so, you will receive instructions on how to ship the products to IASUS Concepts or our designated resource. If instructed to ship the product, you must ship them with freight, duties, and insurance prepaid. Regardless of where		
you are instructed to ship your product, you must include: A copy of your dated sales document receipt A written description of the problem		
 Your name, address, and contact details Payment for any services or repairs not covered by the warranty. This should have been predetermined with pour customer service representative. RETAIN YOUR ORIGINAL PROOF OF PURCHASE For products we ask you to ship to us, we will ship repaired or replacement products at our expense for the freight and insurance, but at your expense for any duties.		
What this warranty does not cover □ □ Damage from improper operation, misuse, neglect such □ as dropping the product onto hard surfaces, contact with □ extreme humidity or heat, or acts of nature (lightning, □ floods, power surges etc)		
cause. IASUS Concepts reserves the right to make changes in the design of the product and to make additions or improvements to it without incurring any obligation to modify any products previously sold.		

your product for warranty.

There is no informal dispute settlement mechanism available. This warranty gives you specific legal rights, and you may also have other rights, which vary geographically. Some areas do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusions or limitations or consequential damages, so the above limitations or exclusions may not apply to you. IASUS Concepts shall not be liable for any special or consequential damages or for loss or expense directly or indirectly arising from use of the product or in inability to use the product in combination with other equipment or from any other

Legal Information

www.iasus-concepts.com/registration.html Please visit the following link to register your product for warranty. To Register for your warranty

П

